



ALLFLEX DETACHERS




- Reliable automatic performance
- Handles slow letdown cows automatically
- Consistent milking every time
- Minimizes over-milking and under-milking
- Smooth, gentle detaching action
- Vacuum operated

- See through canisters let you know when a cow is milking
- Fast, positive, in place wash-up
- Low Maintenance. Easy Maintenance
- Adaptability that pays off
- Compatible with existing claws
- Counterweight adjusts take-off times



HOW IT WORKS, STEP BY STEP

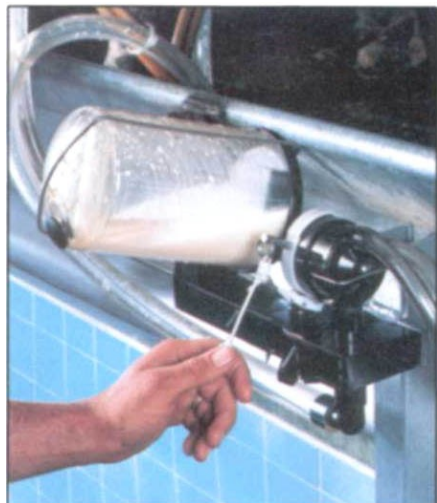


1. Milker pulls "trip" cord which sets valve in "milk" position releasing cylinder vacuum to allow claw attachment



2. Claw is attached, built-in delay waits for any slow letdown. Sensor will self-activate into automatic phase



3. Canister tips down as milk weight increases. Second letdowns are handled during this automatic phase.

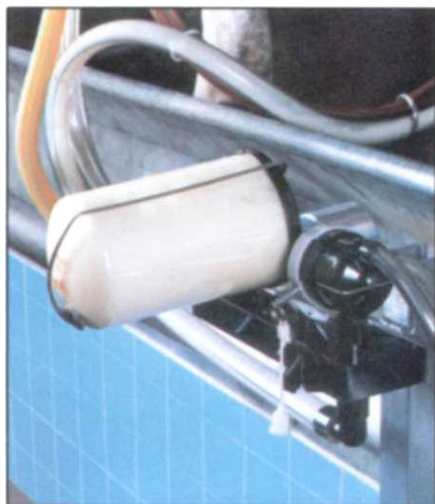

4. Milk flow decreases to the take off time you preset. Counterweight pivots canister up to off position



5. Positive vacuum shut-off occurs when canister reaches off position. Claw then gently detaches from cow.



6. Cow is milked out. Vacuum is on at cylinder, claw is retracted. Detacher is ready for next cow.

The Allflex Automatic Detacher. So Simple it Works. Time after Time.



Visit our Website at:
www.nupulse.com or
www.ezeemilkingcatalog.com

E-Zee NuPulse
4904 Triangle Street, Ste. A
McFarland, WI 53558
Tel: 800-233-6878
Fax: 608-838-2221
Email: nupulse@nupulse.com